
MISSILE INVADER

Instruction

◆Please read carefully before playing. ◆

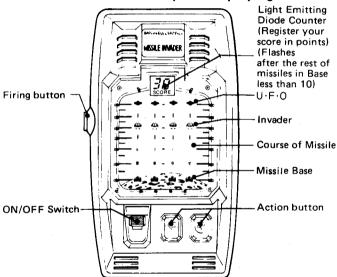

Specifications		Large Scale Integrated Circuit			١
Name:	Bandal Hand-Heid Missile Invader	Constructions:			ı
Battery:	Requires one		<i>N</i> dth: Height.		l
	9 volt (not included)	M-1-5- 0 44	A	Leave to the second	ı

PART NAMES AND FUNCTION

POWER SWITCH



Switch on to start game Switch off after final score is registered. Switch on to start game again.

Action Button





Use these buttons to move your missile base. Arrows indicate what direction base will move.

• Firing Button



Firing button to shoot missile from your base.

Digital Counter



When your missile hits U.F.O. you will gain 5 point, and hits Invader 1 point will be given. If your score more than 99 points — the following will appear.

POINTS	DIGITAL COUNTER
100~109	$\it AD\sim\it AG$
110~119	50 ∼ 59
120~129	50 ~ 59
130 ~ 139	$\sigma'\mathcal{Q} \sim \sigma'\mathcal{Q}$
140~149	$arepsilon_{arphi}\simarepsilon$
150	come back to 🚜
151~245	/ ~ 95
a.= .=	

245 (Best score)

Try to get the maximum score!

Sound Effects


- * Firing sound -
- * Destruction sound -
- * Explosion sound -
- Game over sound —

PHOW TO PLAY

OBJECT: SEE HOW MANY POINTS YOU CAN SCORE WITH 50 MISSILES.

- Switch power "ON" U.F.O. and Invader will start to move right and left.
- 2. Escape the attack of Invader by operating Action button.
- 3. Press firing button, attack Invader and U.F.O.
- You have 50 missiles in your base. If your base is hit by Invader's missile you'll lose 5 missiles at once.
 - Caution: In case your missile hits Invader's missile, your missile will disappear.
- Digital score will begin flashing after the rest of missiles in base become less than 10.
- When you have shot 50 missiles or spent 50 missiles, game is over.
- 7. To play again, switch "OFF" and then switch "ON" again.

TO INSERT BATTERY

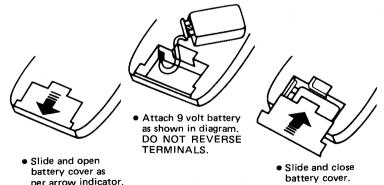

90 DAY LIMITED WARRANTY

Bandai Electronics Arcade Games are manufactured under stringent quality control conditions. We warrant (to the original consumer purchaser) for a period of 90 days from the date of the purchase that our Electronics Arcade Games will be free of defects in materials and workmanship under normal use.

If, within the 90 day warranty period, you find your game to be not functioning properly, please consult your instruction manual for a possibly simple remedy to your problem. If such consultation does not remedy the malfunction, your game will either be repaired or replaced with a new model without charge to the retail establishment where purchased with proof of purchase date, or by sending with proof of purchase date to:

BANDAI ELECTRONICS REPAIR CENTER 6 Pearl Court Allendale, NJ 07401

BANDAI ELECTRONICS WILL NOT BE LIABLE FOR DEFECTS CAUSED BY MISUSE OF PRODUCT. WE WILL ALSO NOT BE RESPONSIBLE FOR DAMAGES OR LOSS IN TRANSIT FROM CONSUMER TO OUR REPAIR CENTER.

To service your game, please do the following:

- Pack the game carefully (in original box if possible) with adequate padding material.
- 2. Carefully print the following address on your outer carton:

BANDAI ELECTRONICS REPAIR CENTER 6 Pearl Court Allendale, NJ 07401

With normal use and care your Bandai Electronics Arcade Game should provide you with many hours of enjoyment.

Important

Should screen image or scoring begin to malfunction, this is the first sign of battery wear. A new battery will solve the problem.
Use 9 volt alkaline battery for longer life.

